





SENCOR®

SCD 120

USER'S MANUAL

LED CLOCK WITH A DOUBLE ALARM
AND CURVED DISPLAY

    FUNCTION AND CONTROLS

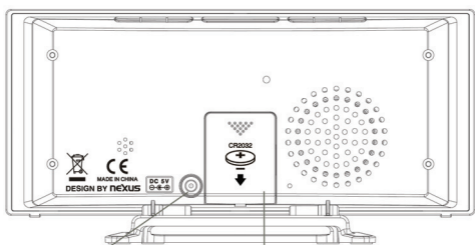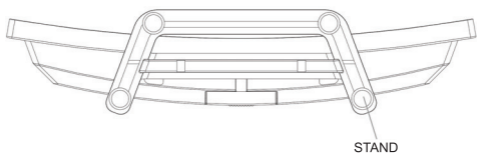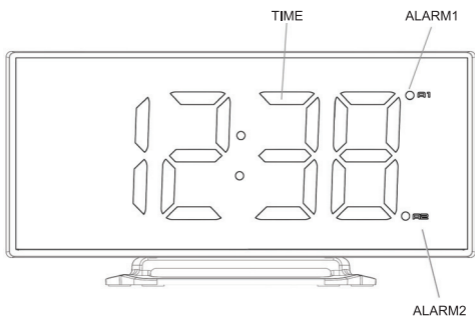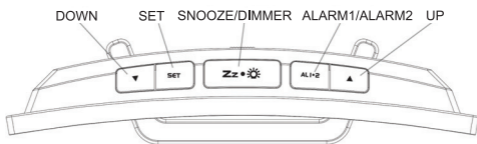

DC SOCKET

AC/DC ADAPTOR



INSERT AC/DC ADAPTOR JACK

INSTALLATION

Plug the AC/DC adaptor to an AC household outlet, and then plug the DC jack to the back of the unit. Your clock is ready to work for you.

BACKUP BATTERY INSTALLATION

Your clock requires one CR2032 lithium battery (not included) to provide backup power to the clock in the event of a temporary power interruption.

1. Place your unit face down on a flat surface.
2. Slide and remove the battery cover at the bottom of your unit.
3. Insert one new CR2032 lithium battery into the battery compartment with the "+" side facing up as indicated.
4. Replace the battery cover.

If AC power is interrupted, the LED display will go off and the alarm will not function. The backup battery will keep the time and all settings of your unit. Make sure a fresh CR2032 lithium battery is used. A fresh CR2032 battery could backup your clock continuously for around 3 days.

SETTING TIME AND THE SNOOZE DURATION

1. Press **SET** once, the hour digits flash. Press ▲ or ▼ to set the current hour (hold to advance rapidly).
2. Press **SET** again, the minute digits flash. Press ▲ or ▼ to set minutes. (hold to advance rapidly).
3. Press **SET** again, the display shows "05" and flashes. Press ▲ or ▼ to select your snooze time from 5 to 60 minutes.
4. Press **SET** again or if no key is pressed in approx. 10 seconds to exit the setting mode.

SETTING THE ALARMS

1. Press **AL 1.2** once, the **A1** LED and the hour digits flash. Press **▲** or **▼** to set the alarm 1 hour. (hold to advance rapidly).
2. Press **AL 1.2** again to adjust minutes. Press **▲** or **▼** to set the alarm 1 minutes. (hold to advance rapidly).
3. Press **AL 1.2** again, LED displays "**OFF**" (alarm off). To turn on the alarm, press **▲** or **▼** to select "**ON**".
4. Press **AL 1.2** again, LED displays "**HI**". To select lower buzzer sound level, press **▲** or **▼** to select "**LO**".
5. Press **AL 1.2** again, the **A2** LED and the hour digits flash. Press **▲** or **▼** to set the alarm 2 hour. Repeat step 2) and 4) to set alarm 2.
6. Press **AL1.2** again or if no key is pressed in approx. 10 seconds to exit alarm setting mode. When the related alarm is turned on, it will be indicated by the appearance of the **A1** and/or the **A2** LED on the right side of the display.

STOP AND RESET THE ALARM TO COME ON THE NEXT DAY

When alarm 1 or 2 is sounding, the related **A1** or **A2** LED flashes. Press the **AL 1.2** once to stop the alarm and reset it to come on the following day. After that, **A1** or **A2** icon stays on the display.


SNOOZE OPERATION (default snooze duration is 5 minutes)

When alarm is sounding, press **Zz • ☀** once, the alarm will be silenced and come on again after the set snooze duration.

Note:

If your second alarm activates while the first alarm is sounding or it is in the snooze mode, the second alarm overrides the first alarm (the first alarm is reset to come on the next day).

USING THE HI-LO-OFF DIMMER

Press **Zz** •  to adjust the brightness (**HI/LO/OFF**) of the LED display. This can only be done when the unit is not sounding or snooze functioning.

TROUBLE SHOOTING

If your clock displays irrelevant time or does not function properly, which maybe caused by electro-static discharge or other interference, unplug the DC jack to disconnect the AC power (and remove the backup battery). The clock will be reset to default settings and you need to set it again.

CARE OF YOUR PRODUCT

1. Place your clock on a stable surface, away from sources of direct sunlight or excessive heat or moisture.
2. Protect your furniture when placing your units on a natural wood and lacquered finish by using a cloth or protective material between it and the furniture.
3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzene, thinner or similar materials can damage the surface of the unit. Make sure the unit is unplugged before cleaning.
4. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.

SPECIFICATIONS

Alarm duration	2 minutes
Snooze duration	5 to 60 minutes
Time format	24 hr
Default settings:	
Time	0:00
Alarm 1 and 2	6:00
Snooze duration	05 (5 minutes)
Power supply:	power adapter DC 5V, 300 mA (included) backup battery 1 x 3v type CR 2032 (not included with this product)
Power consumption:	1 W
Dimensions:	171 x 87 x 40 mm
Weight:	140 g

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product.

Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives that apply to it.

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.

This file was downloaded from the site
mans.io

Instruction manuals and user guides

[Samsung](#)

[Pioneer](#)

[Alpine](#)

[LG](#)

[Dell](#)

[Sharp](#)

[Sony](#)

[Philips](#)

[Epson](#)

[Netgear](#)