

79I09080B

重要度

[B]

产品名称： 出口加蓬 (Skyworth) 说明书

产品型号： SRD-199DB

技术要求：

- 1 页面规格435mm\*297mm（展开）；
- 2 印刷颜色应均匀，且无毛边；
- 3 图案和文字清晰、规范；
- 4 说明书共1页，正反两面印刷，折页版式，成品需要有折痕，折痕对其图中虚线，保证封面在最外层；
- 5 图纸最外框的边框线为裁切线，不需要印刷，图纸中的虚线为折痕线，不需要印刷。
- 6 须经产品部确认才能批量印刷，实物以封样件为准。

借(通)用件登记

 

旧底图总号

底图总号

出图审查

日期	1	说明书	B2073-006-2262	出口加蓬说明书
----	---	-----	----------------	---------

序号	名称	物料号	备注
----	----	-----	----

序号	图号	名称	数量	材料	备注					
				纸张: 80g胶版纸	创维电器					
					说明书 加蓬 (Skyworth) SRD-199DB					
标记	处数	分区	更改文件号	签名	年、月、日	阶段标记	版本	重量	比例	
设计	何伟		2016.6.27	标准化	李吉刚	2016.6.27		A		1:1
审核	石浩亮		2016.6.27	会签	贺军	2016.6.27	共 1 张	第 1 张		
模块审核	肖华		2016.6.27	审定			图形识别符号			
工艺	范一民		2016.6.27	批准	李树强	2016.6.27				

B08060162

# REFRIGERATOR

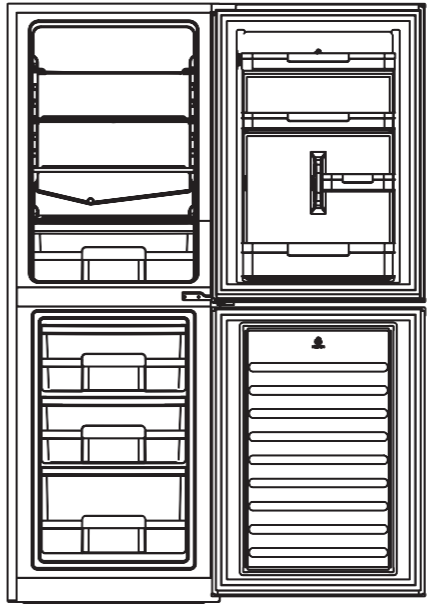
## INSTRUCTION MANUAL

ITEM:SRD-199DB

### Dear Customer

Please read these Operating Instructions carefully before you connect your new refrigerator as they contain important information on its safe and proper use, installation and care. Please keep the Operating Instructions in a safe place for future reference. Moreover, please pass them on to possible new owners of the appliance.

### General Description of Refrigerator



	SRD-199DB
1 Thermostat Control (Interior Light)	1
2 Refrigerator Shelf	3
3 Salad Crisper Cover	1
4 Salad Crisper	4
5 Adjustable Foot	2
6 Door Storage	4

(Picture shown for indicative purposes only, model supplied may differ).

### Transportation and Handing

When transporting, hold the base and lift the refrigerator carefully with the tilted angle more than 45 degree. Never hold the door handle as support. Never place it upside down nor horizontalwise nor get it extruded. Push refrigerator away by making its two hind roller feet as axis and then tilting it slightly during moving indoors.

### Installation

1. Install the refrigerator at a place with a flat, firm ground directly. In order to prevent vibration and noise.
2. Choose a well-ventilated place. A space of no less than 10cm must be left around the refrigerator.
3. Choose a location where there is no heat source. Keep the refrigerator away from direct sunlight and oven etc..
4. Choose a dry and well-ventilated place where there is no corrosive air.

### Testing

and wipe them dry.

**Notes: Electric parts of the refrigerator can only be wiped by dry cloth.**

2. Turn the thermostat knob to the "3" position, turn on electricity. The compressor and the light inside the refrigerator begin to work.
3. Close the door 30 minutes later, if the temperature in the freezer compartment decreased obviously, it shows that the refrigerator system works well. When the refrigerator operates for a period of time, the temperature controller will automatically set the temperature within limits it opens.
4. If the above steps are successful, the trial operations finish. The refrigerator works normally.

### Temperature Control

1. The temperature in the refrigerator compartment and freezer compartment is controlled by the temperature controller installed on the top wall of the refrigerator compartment.
2. Turn the thermostat knob to right or left, you can regulate the temperature inside the refrigerator.
3. The marks on the knob are the temperature grades, not the exact number of the degrees of temperature. "0" shows a forced STOP and "7" shows the lowest temperature. Turn the knob from "1" position to "7" position, the temperature decreases continuously. You may set the temperature control selector to any position according to what you need.
4. Please set the selector to "4" position in normal use.

### Storage of Food

#### 1. How to Use the Freezer Compartment

- \*Put fresh and clean food such like fish, meat into freezer to frozen store, therefore the taste and nutrient of food are preserved.
- \*Wrap food to be frozen in ALUMINIUM FOIL or place it in AIRTIGHT boxes.
- \*Do not allow already frozen food into direct contact with food to be frozen.
- \*If you buy deep frozen food in the shops, bring it home and place it in freezer as quickly as possible so that the time during which it kept in the air temperature is as SHORT AS POSSIBLE.

#### 2. How to Use the Refrigerator Compartment

- \*The cook dishes can be put into refrigerator to keep fresh after their temperature decreases to room temperature.
- \*Egg tray and upper rack for eggs, middle rack and lower rack for milk and bottle drinks, etc.
- \*Other food such as MEAT, FISH AND suchlike, in addition to becoming dry, may cause smells. To prevent this, they should be wrapped in aluminum foil, placed in suitable polythene bags or stored in proper airtight containers.

#### 3. Placement of Food

- \*Proper place should be left instead of too crowded during food storage.
- \*Food to be stored should be wrapped with clean plastic film or fresh keeping paper, then distributed to several frames even to avoid contamination and the loss of water and smell mixture.
- \*Cool hot food down to the room temperature before storing or consumption of electricity will increase and would lead to frost forming inside.
- \*Never place vegetables and fruits into freezer compartment in order to prevent them from being frostbitten.

### Defrosting

1. When the refrigerator working for a period of time, the inner surface of the freezer will be covered with a layer of white frost. It may raise the electricity consumption and lessen the effect of refrigeration. Then you should do frost removal at once.
2. When defrosting, cut off the power, open the door and move frozen foods to a shady and cooling place, defrost with a plastic scraper, or let the temperature rise naturally till frost melts. Then wipe away remaining ice and water, and switch on electricity again.

**Notes: Never use sharp metal tools or it will damage the refrigerator.**

**Notes:**

- \*The appliance should be so positioned that the plug is easily accessible.
- \* If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- \* The product is for household use only.
- \*The appliance shall not be used in open air and shall not be exposed to rain.
- \*Don't store something like ether, methanol, gasoline etc., which is easy to evaporate burn or explode.
- \*Don't set something too heavy on the top of refrigerator and do not pour water on it.
- \*Do connect your refrigerator to an independent electrical socket and use a safe ground wire. The voltage should be limited within the ranges from 187V to 242V, or the main motor will be damaged.
- \*Turn on electricity only 5 minutes later after electricity goes off. Otherwise, the compressor may be damaged.
- \*In order to save electricity consumption, keep air circulation during operation and the package base should be taken away.
- \*Sure to keep electrical wire away from compressor and condenser, or its insulation function will be spoiled by high temperature.
- 4 \*To save the energy, you should reduce the frequency and duration of the opening of the door.
- \*When the frost in freezer is removed, or where there is no electricity or when refrigerator ceases to be used, it should be cleaned in time in order to prevent it from smelling. Too much frost may affect refrigeration.
- \*Do not touch the food in the freezer box or container (especially metal container) with wet hand, or it may be frost bitten.
- \*It is not recommended to use any extension cords.
- \*If your refrigerator is with lock, to avoid children shut into the refrigerator, do not leave the key near the refrigerator or other place easy to be touched by children.
- \***Warning**—Keep ventilation openings in the appliance enclosure or in the structure for building in, clear of obstruction.
- \***Warning**—Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- \***Warning**—Do not damages the refrigerant circuit.
- \***Warning** – Do not use flammable appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- \*If the appliance can not be used any more, please release the refrigerant before abandon at a place exposed to the air

and away from tinderbox.

**Correct Disposal of this product**

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**General Instructions for Care and Maintenance**

The refrigerator should be cleaned every other month, before cleaning, the electric plug must be removed from the power supply.

Wipe the inside and outside of the refrigerator with a wet soft cloth.

If it's too dirty, clean with a soft cloth soaked with neutral detergent and clean water, remove the moisture with dry cloth. If you are going away on holiday or for any other reason, wish to leave the refrigerator idle for any period of time, proceed as follows:

- \*Disconnect the refrigerator from the electric power supply by removing the plug from the wall socket.
- \*Remove all food.
- \*Clean and dry the inside as instructed in the direction given above for cleaning.
- \*Leave the doors open to prevent any unpleasant smells from building up while the refrigerator is not used.

**Cleaning:**

- \*When cleaning the refrigerator the electric plug must be removed from the power supply.
- \*Use water and a non-abrasive detergent.
- \*Clean with a soft cloth soaked in this solution and remove moisture with a dry cloth.
- \*Remember to clear the defrost drain situated at the back just above the glass cover.

**Working Defects and Failures****Symptom:**

Appliance will not work at all.

**Cause:**

The power supply plug is not inserted in the wall socket or the plug and the outlet is loose.  
Due to some anomaly in the household electric supply circuit, no power is reaching the refrigerator supply socket. This can be checked by plugging in a light or any other electric appliance into the suspect socket.  
The voltage is too low.

**Symptom:**

Noisy running.

**Cause:**

The appliance has not been properly leveled.  
The refrigerator contact with the wall.  
The accessories in the refrigerator are placed wrong position.

**Symptom:**

Appliance does not cool sufficiently.

**Cause:**

Door has been opened too often, or it has been left open for a while.  
The refrigerator is too near to the wall.  
Too much food in the refrigerator.  
Have not regulated the temperature correctly.

**Symptom:**

Smell inside the appliance.

**Cause:**

Some of the food is not properly wrapped or covered.  
The inside of the refrigerator needs cleaning.

If your refrigerator shows other symptoms from those described above, or if you have check all items listed as the causes and the symptom still exist, then call the service department.

**The Following Are not Breakdowns**

1. Refrigerant running in pipes gives forth a gentle sound of water running in pipes.
2. In a moist season, the outer surface of refrigerator may be covered with moisture which should be simply wiped away.
3. The compressor and the rear condenser may be heated to the extent that scalding your hand in summer during refrigerator operation.
4. Door frame heat means the anti-dew tube is working during refrigerator operation.

**WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

**WARNING:** Do not damage the refrigerant circuit. Note This warning is only for appliances with refrigerating circuits which are accessible to the user.

**WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

**WARNING:** If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

**WARNING:** The apparatus does not intend to be used by physical, Sensory or mental defective people, or the lack of experience and common sense (including children), unless they were responsible for the safety of their people who care enough to give guidance on how to use this apparatus.