 


AKAI

Bluetooth Speakers with USB/ SD/ AUX & FM Radio

INSTRUCTION MANUAL

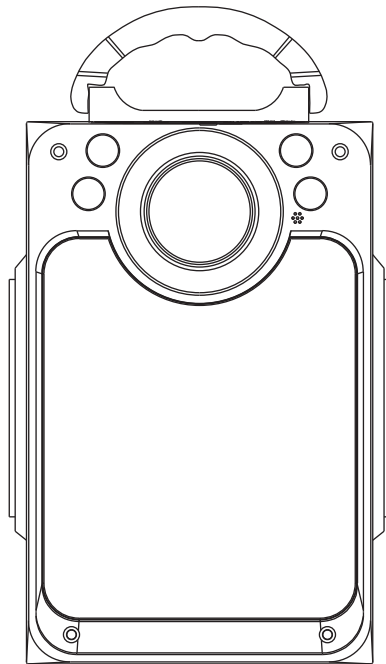



CEU7300-BT


Thank you for purchasing this Bluetooth Speakers. Please read this instruction manual carefully before using this product to ensure proper use. Keep this manual in a safe place for future reference.


www.AKAI-USA.com

WARNINGS

WARNING: TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.</p>		

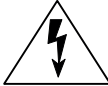 This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

 This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

DRIPPING WARNING

The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.

VENTILATION WARNING

The normal ventilation of the product shall not be impeded for intended use.

Class II equipment symbol



This symbol indicates that the power adaptor has a double insulation system.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.




 
FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installer must ensure that 20 cm separation distance will be maintained between the device and user.

DECLARATION DE LA FCC RELATIVE A L'EXPOSITION AU RAYONNEMENT

Cet appareil est conforme aux limites d'exposition au rayonnement RF stipulées par la FCC et IC pour une utilisation dans un environnement non contrôlé. Les antenne utilisées pour cet émetteur doivent être installées et doivent fonctionner à au moins 20 cm de distance des utilisateurs et ne doivent pas être placées près d'autres antennes ou émetteurs ou fonctionner avec ceux-ci. Les installateurs doivent s'assurer qu'une distance de 20 cm sépare l'appareil des utilisateurs.

FCC ID : OWT-CEU7300BT

	DC voltage
	Caution Please refer for further information to the user manual
	RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.
	Polarity of d.c. power connector

FCC AND CANADIAN ICES

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television (which can be determined by turning the equipment off), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced / TV technician for help.

NOTE: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Portable Cart Warning

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

IMPORTANT SAFETY INSTRUCTIONS

WARNINGS:

- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
Avertissement: pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- The MAINS plug / power adaptor is used as the disconnect device, it should remain readily operable during intended use.
In order to disconnect the apparatus from the mains completely, the main plug / power adaptor should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation.
Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution Marking and rating plate was located at bottom enclosure of the apparatus.
Les marquages sont inscrits en bas de l'appareil.
Les précautions d'emploi sont inscrites en bas de l'appareil.
- Under the environment with electrostatic discharge the sample may malfunction and need user reset to recover sometimes.
Dans l'environnement Avec l'échantillon mai dysfonctionnement de décharge électrostatique et besoin de récupérer la réinitialisation de l'utilisateur Parfois.

BATTERY WARNING

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different type of batteries together (e.g. Alkaline and Carbon Zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged, they can overheat and rupture (Follow battery manufacturer's directions).
6. Rechargeable batteries are to be removed from the product before being charged.
7. Rechargeable batteries are only to be charged under adult supervision.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

 
WHAT'S IN THE BOX

Contents

1. Bluetooth Speakers



2. USB Charging /AUX IN Cable Combo



3. Dynamic Microphone



4. Instruction Manual



5. Warranty Card



If you are missing any parts above, please contact ADT Digital LLC.

Tel: 561 922 6886

 
Fax: 561 922 6159

POWER ON THE UNIT

1. Toggle the ON/OFF switch to ON at the top to turn on the machine. The LED on the volume knob and the mirror will light up.
2. Toggle the ON/OFF switch to OFF to turn off the machine.
3. Refer to different mode operation to start operating the unit.


RECHARGE THE BATTERY OF THE MACHINE

Insert USB cable (small end) into the top of the machine's micro USB jack. Insert the other end into an USB port for charging the machine. You can find these ports from computer or sockets with USB.

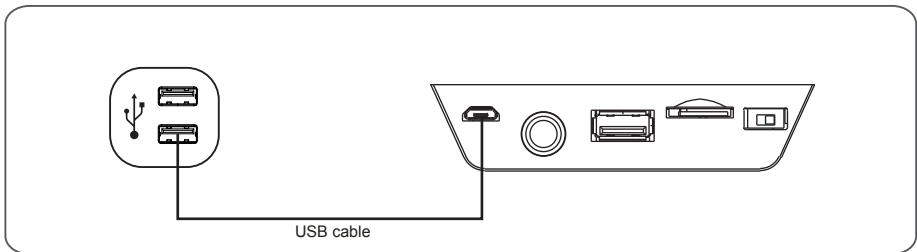

CONTROL LOCATION

 Top Panel

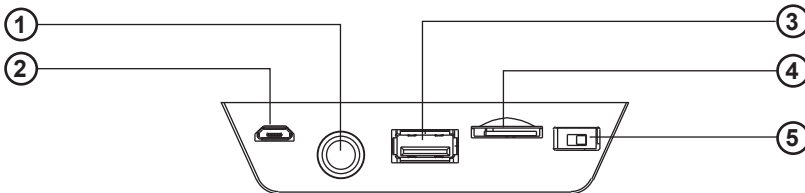


1. Mic Jack
2. Micro USB (DC IN 5V)
/ AUX IN Jack
3. USB Port

4. TF Card Slot
5. ON/OFF Switch

CONTROL LOCATION

 Front Panel

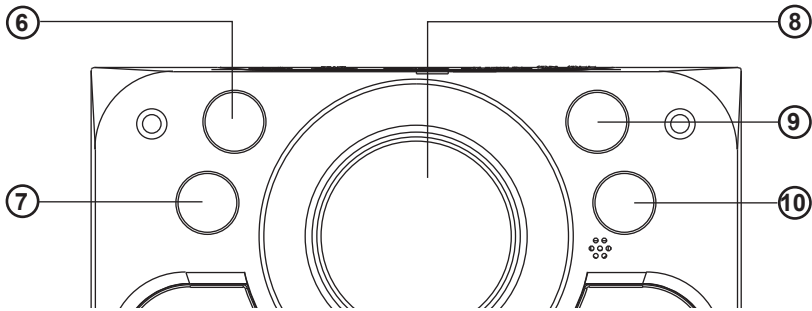

- 6. Mode Button
- 7. Play / Pause
- 8. Volume Knob

- 9. Skip Backward
- 10. Skip Forward

BLUETOOTH OPERATION

- 1) Power on the product or press MODE button to enter Bluetooth mode.
- 2) Open Bluetooth device (mobile phone or computer, etc.) Bluetooth function, search Bluetooth device and look for the Bluetooth name - "CEU7300BT".
- 3) Select the device which will then pair automatically.
(Usually it isn't necessary to enter a password, special models are prompted to enter a password. You can enter "0000")
- 4) The device has been paired successfully. For next time it will connect automatically.
(Note: enter Bluetooth mode within 10 seconds, the Bluetooth device will automatically find and mate connector to connect manually after 10 seconds)
- 5) You can now play the music with your Bluetooth device.
- 6) Turn the Volume Knob in clockwise or anti-clockwise direction to increase or decrease volume level.

FM OPERATION

- 1) Power on the product or press MODE button to enter FM mode.
- 2) Press and hold Play/ Pause button to auto search local FM radio stations.
- 3) Press Skip backward or forward buttons to go to previous or next radio station.
- 4) Turn the Volume Knob in clockwise or anti-clockwise direction to increase or decrease volume level.

TF CARD & USB OPERATION

- 1) Insert TF card or USB into TF card slot or USB port.
- 2) The machine would start to play TF card or USB MP3 file automatically. If it is not, press mode button to toggle to TF card or USB mode.
- 3) Press Play/ Pause button to temporary stop playing the music. Press again to resume.
- 4) Turn the Volume Knob in clockwise or anti-clockwise direction to increase or decrease volume level.
- 5) Press Skip Forward/ Backward button to select the next / previous song you want to play.

AUX IN OPERATION

- 1) Connect the headphone, earphone, line-out jack from an external audio player (such as MP3 player or discman) to the AUX IN jack on the machine by the supplied USB/ Aux-in combo cable.
- 2) Power on the unit as previous procedures. Press MODE button to turn it to Aux In mode.
- 3) Power on the connected external player and start playback as usual.
- 4) Adjust the volume level with the volume knob.

CARE AND MAINTENANCE

1. Place the unit on a level surface away from sources of direct sunlight, excessive heat caused by heating equipment, humidity, rain or sand.
2. Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
3. Do not clean your unit by water directly. Clean the unit with a soft, clean cloth slightly moistened with plain lukewarm water only.
4. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.
5. Do not attempt to disassemble your product.
6. Do not paint your product with lacquer or aerosol.
7. Do not drop, throw or try to bend your product.
8. Do not expose your product to open flames.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
No power when POWER is on	AC/DC adaptor is not plugged into a wall outlet or the connector is not plugged into the power supply or the DC IN jack of the unit.	Check the connection of the AC/DC adaptor between the unit and wall outlet.
No sound	Volume control is set at minimum or mute.	Check that the volume control is NOT at minimum. Check that it is not set to mute.
	The volume control of external BT player (or audio player) is too low.	Increase the volume of external BT player (or audio player).
No sound in Bluetooth (BT) mode	The pairing had not been done properly.	Check if you have pairing or not. It needs to pair the external BT player and the speaker with password "0000" or "1234" before 1st time listening.

SPECIFICATION

Audio Section Output power	2 x 3W RMS
Frequency response	100 Hz - 20 kHz
SNR	≥80 dB
THD	≤1% (1W 1kHz)
Battery	Built-in Lithium Battery 1200mAH
Power supply	DC5V 0.5A or USB Power
Dimensions (W X H X D)	6.5 x 10.1 x 7.3 inches / 16.3 x 25.5. x 18.3 cm
Weight	3.6 lbs / 1.6 kg

Specifications are typical, individual units might vary. They are subject to continuous improvement without notice and without incurring any obligation.