

AKAI

Home Entertainment Bluetooth Receiver

DJ-530



USER MANUAL

EN



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of "uninsulated dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

Safety Precautions

Warning: To prevent fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT SAFEGUARDS

Caution: Please carefully read all of the following important safeguards to ensure safe operation.

1. Read Instructions:

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions:

The safety and operating instructions should be retained for future reference.

3. Follow Instructions:

All operating instructions should be followed.

4. Heed Warnings:

All warnings on the unit and the operating instructions should be adhered to.

5. Power Source:

The appliance should be connected based on instructions.

6. Heat:

Keep the unit away from heat sources such as radiators, refrigerators, stoves or other appliances that may radiate heat.

7. Non-use Periods:

 
The power cord of the unit should be unplugged from the outlet when you do not use it for a long time.

8. Damage requiring service:

The unit should be repaired by qualified service personnel in the following cases:

- The power plug or cable has been damaged;
- Objects have fallen or liquid has been spilled on the appliance;
- The appliance has been exposed to rain;
- The appliance is functioning abnormally.

CONNECTIONS

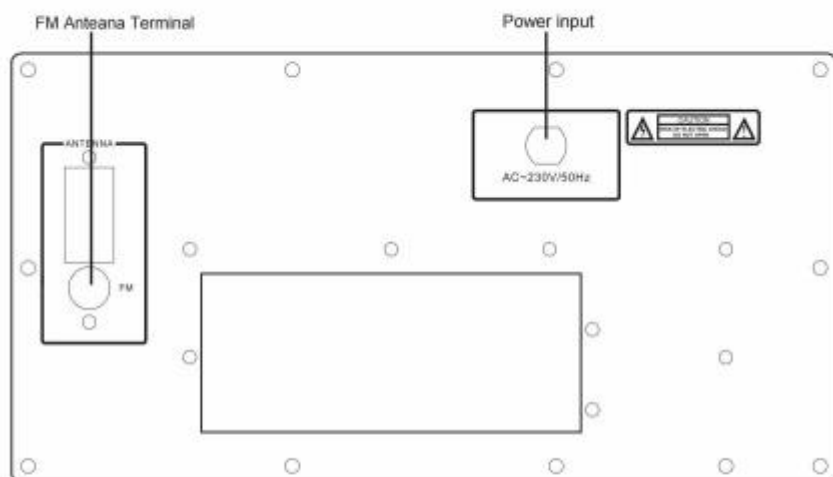

Accessories



REMOTE CONTROL



INSTRUCTION
MANUAL



FM ANTENNA



AUDIO CABLE

 


HANDLE x 2




SCREW x 10

FRONT PANEL-CONTROLS AND FUNCTIONS

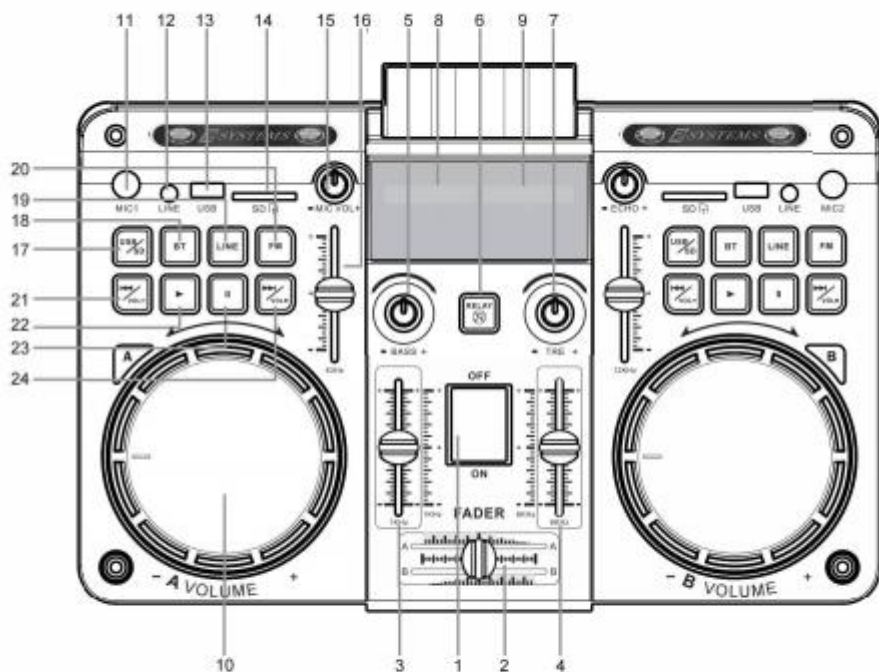


1. Power ON/OFF
2. A B System fader
3. Equalizer
4. Equalizer
5. BASS increase/weakers
6. Mute of whole unit
7. Treble increase/weakers
8. A System LED display
9. B System LED display
10. A System Volume control knob
11. Microphone 1 input slot
12. A System Line input slot
13. A System USB input slot
14. A System SD card input slot
15. Microphone volume increase/decrease
16. Equalizer
17. A System USB/SD card input key
18. A System BT input key (BT searching name: AKAI A)
19. A System Line input key
20. A System FM input key
21. A System Previous key, long press for volume decrease
22. A System Play key
23. A System Pause key
24. A System next key, long press for volume increase

 FRONT PANEL-CONTROLS AND FUNCTIONS

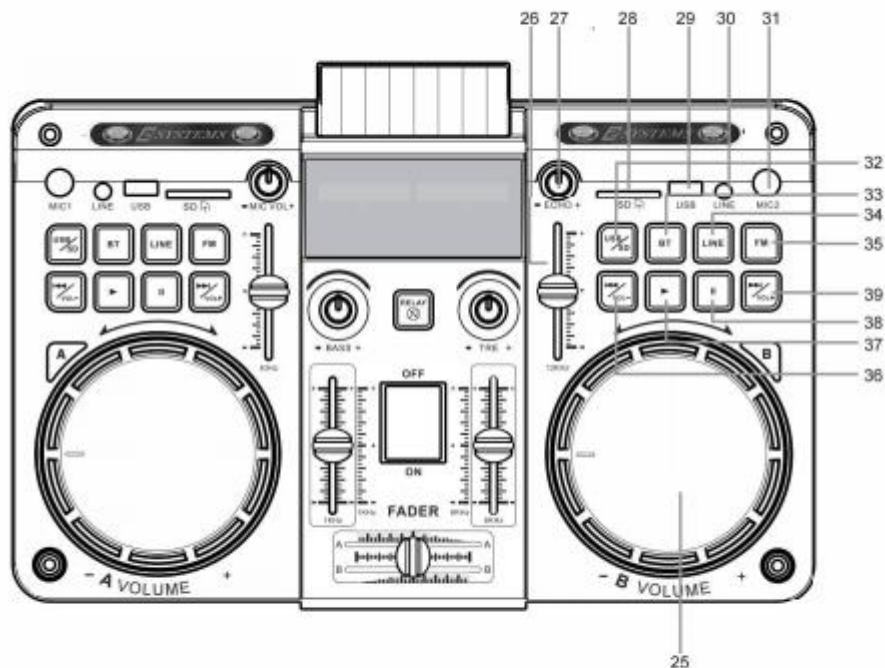

- 25. B System Volume control knob
- 26. Equalizer
- 27. ECHO increase/decrease
- 28. B System SD card input slot
- 29. B System USB input slot
- 30. B System Line input slot
- 31. Microphone2 input slot
- 32. B System USB/SD card input key
- 33. B System BT input key(BT searching name: AKAI B)
- 34. B System Line input key
- 35. B System FM input key
- 36. B System Previous key, long press for volume decrease
- 37. B System Play key
- 38. B System Pause key
- 39. B System next key, long press for volume increase

 REMOTE INSTRUCTION

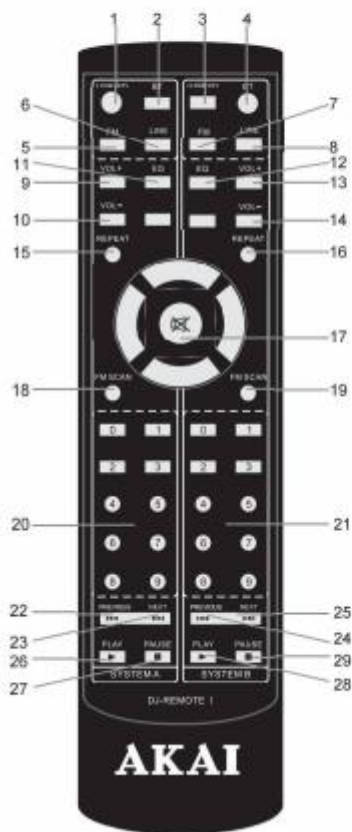



1. A System USB/SD card input button
2. A System BT input button
3. B System USB/SD card input button
4. B System BT input button
5. A System FM input button
6. A System LINE input button
7. B System FM input button
8. B System LINE input button
9. A System volume increase
10. A System volume decrease
11. A System Equalizer
12. B System Equalizer
13. B System volume increase
14. B System volume decrease
15. A System play again
16. B System play again
17. Mute volume
18. A System auto scan for channels
19. B System auto scan for channels
20. A System USB/SD card song select
21. B System USB/SD card song select
22. A System previous song
23. A System next song
24. B System previous song
25. B System next song
26. A System play
27. A System Pause
28. B System play
29. B System Pause

Dual Bluetooth Speaker



A SYSTEM

  B SYSTEM

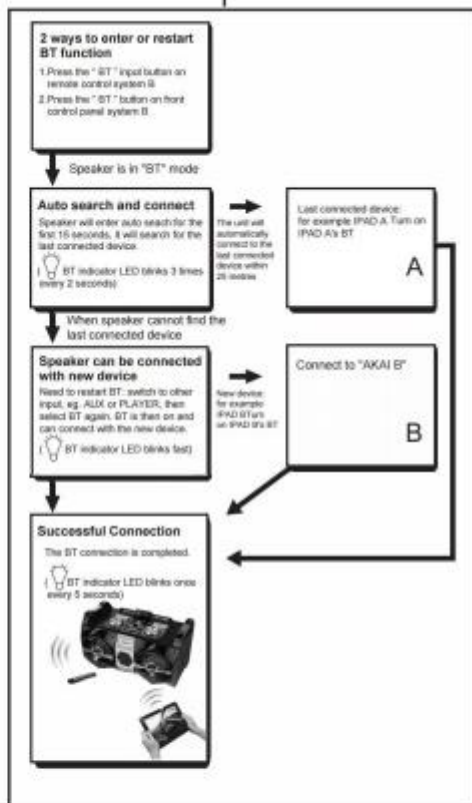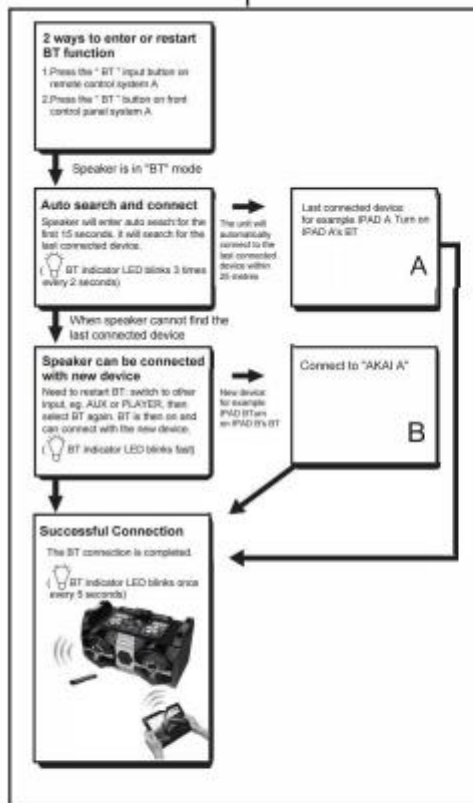

This symbol on the product or packaging means that the product should not be treated as household waste. Do not throw garbage at the end of its life, but take it to a collection center or recycling. In this way you will help to protect the environment and be able to prevent any negative consequences that it would have on the environment and human health.



AKAI

AKAI

Sistem audio cu Bluetooth

DJ-530



 **Bluetooth®**

MANUALUL UTILIZATORULUI

RO



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



Simbolul fulgerului cu sageata intr-un triunghi echilateral este folosit pentru a avertiza utilizatorul de prezenta "voltajului periculos neizolat" in interiorul produsului care poate fi de o putere suficienta pentru a constitui risc de soc electric pentru o persoana. Semnul exclamarii in interiorul unui triunghi echilateral este folosit pentru a avertiza utilizatorul despre prezenta unor instructiuni (service) importante de operare si intretinere in literatura care insoteste acest produs.

Masuri de precautie

Atentie: Pentru a preveni incendiul sau electrocutarea, nu expuneti aparatul la ploaie sau umezeala.

MASURI DE SIGURANTA IMPORTANTE

Atentie: Va rugam sa cititi cu atentie toate masurile de precautie importante pentru a asigura operarea aparatului in siguranta.

1. Cititi instructiunile:

Toate instructiunile de siguranta si de operare trebuie citite inainte de a pune aparatul in functiune.

2. Retineti instructiunile:

Instructiunile de operare si siguranta trebuie pastrate pentru referinte ulterioare

3. Urmati instructiunile:

Trebuie sa urmati toate instructiunile de operare.

4. Atentionari:

Toate atentionarile aflate pe unitate si in instructiunile de operare trebuie respectate.

5. Alimentarea la curent:

Aparatul trebuie conectat conform instructiunilor.

6. Caldura:

Tineti unitatea departe de surse de caldura, cum ar fi radiatoare, frigidere, sobe sau alte aparate care pot radia caldura.

 
7. Perioadele de inactivitate:

Cablul de alimentare al unitatii trebuie scos din priza atunci cand nu folositi aparatul o perioada indelungata de timp.

8. Defecte care necesita service:

Unitatea trebuie reparata de personal calificat de service in urmatoarele cazuri:

- Cablul de alimentare sau fisa au fost avariate;
- Pe aparat au cazut obiecte sau s-a varsat lichid;
- Aparatul a fost expus la ploaie;
- Aparatul nu functioneaza corespunzator.

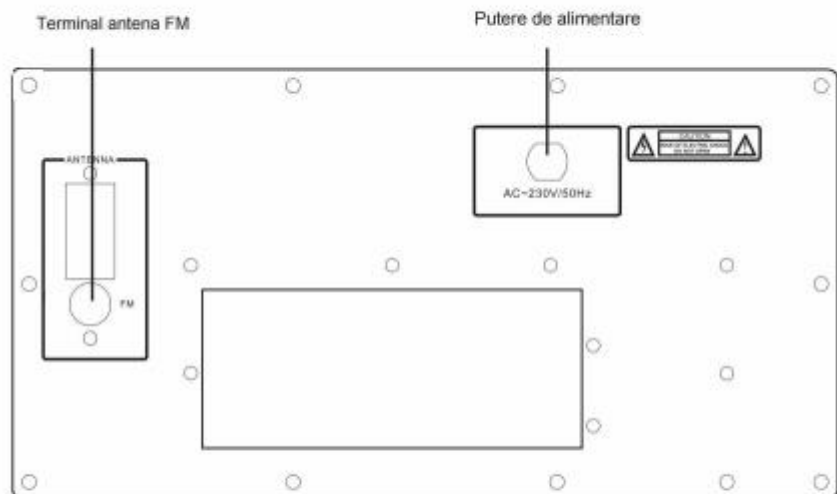

Accesorii



TELECOMANDA



MANUAL
INSTRUCTIUNI



ANTENA FM



CABLU AUDIO

 


MANER x 2




SURUB x 10

BUTOANE CONTROL SI FUNCTII PANOU FRONTAL

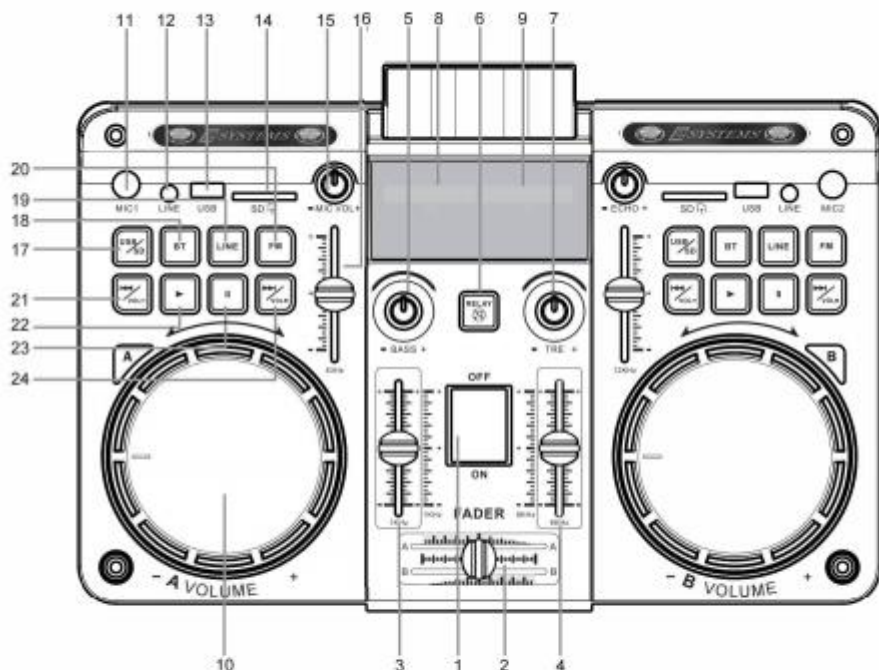


1. Buton pornire/oprire
2. Potentiometru de reglaj sistem A B
3. Egalizator
4. Egalizator
5. Crestere/micsorare BASS
6. Oprea sunetului pentru toata unitatea
7. Crestere/micsorare inalte
8. Ecran afisaj sistem A
9. Ecran afisaj sistem B
10. Buton control volum sistem A
11. Slot intrare microfon 1
12. Slot intrare "Line" sistem A
13. Slot intrare USB sistem A
14. Slot intrare card SD sistem A
15. Crestere/micsorare volum microfon
16. Egalizator
17. Buton intrare card SD/USB sistem A
18. Buton intrare BT sistem A (nume cautare BT: AKAI A)
19. Buton intrare "Line" sistem A
20. Buton intrare FM sistem A
21. Buton "anterior" (Previous) sistem A, apasati lung pentru a micsora volumul
22. Buton "redare" (Play) sistem A
23. Buton "pauza" (Pause) sistem A
24. Buton "urmatorul" (Next) sistem A, apasati lung pentru a creste volumul

 BUTOANE CONTROL SI FUNCTII PANOU FRONTAL

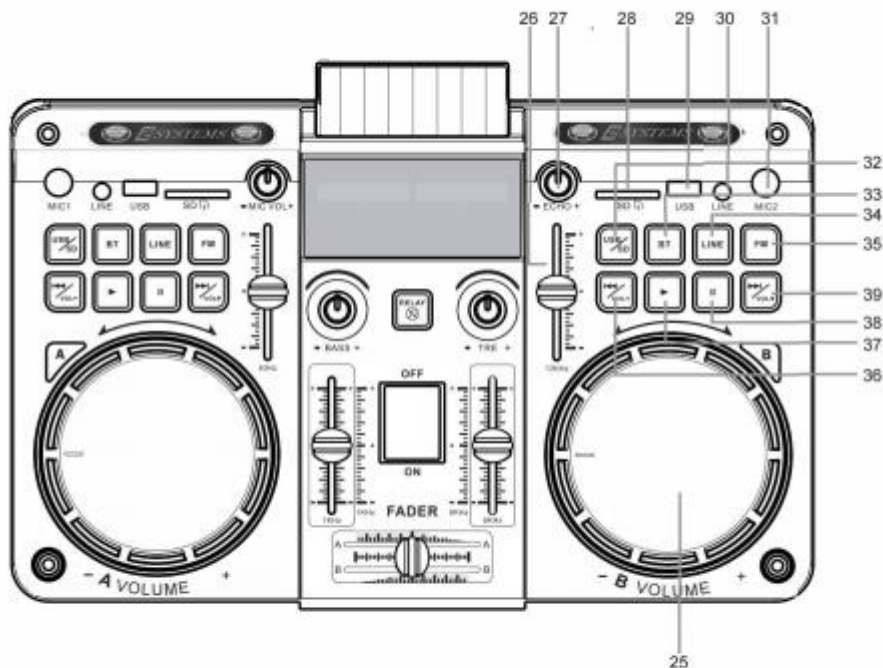

- 25. Buton control volum sistem B
- 26. Egalizator
- 27. Crestere/micsorare ECHO
- 28. Slot intrare card SD sistem B
- 29. Slot intrare USB sistem B
- 30. Slot intrare "Line" sistem B
- 31. Slot intrare microfon 2
- 32. Buton intrare card SD/USB sistem B
- 33. Buton intrare BT sistem B (nume cautare BT: AKAI B)
- 34. Buton intrare "Line" sistem B
- 35. Buton intrare FM sistem B
- 36. Buton "anterior" (Previous) sistem B, apasati lung pentru a micsora volumul
- 37. Buton "redare" (Play) sistem B
- 38. Buton "pauza" (Pause) sistem B
- 39. Buton "urmatorul" (Next) sistem B, apasati lung pentru a creste volumul

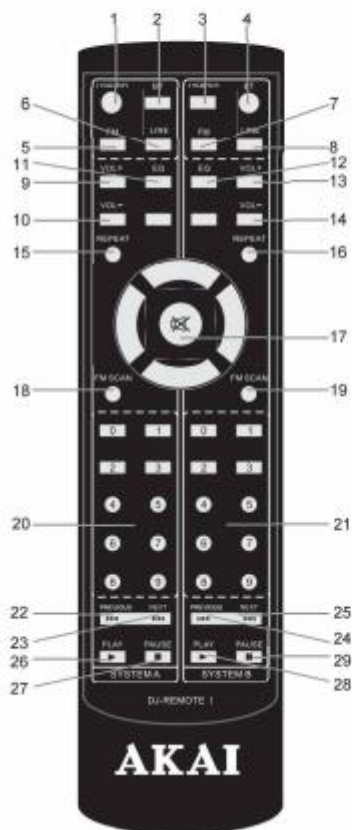 

1. Buton intrare card SD/USB sistem A
2. Buton intrare BT sistem A
3. Buton intrare card SD/USB sistem B
4. Buton intrare BT sistem B
5. Buton intrare FM sistem A
6. Buton intrare LINE sistem A
7. Buton intrare FM sistem B
8. Buton intrare LINE sistem B
9. Crestere volum sistem A
10. Micsorare volum sistem A
11. Egalizator sistem A
12. Egalizator sistem B
13. Crestere volum sistem B
14. Micsorare volum sistem B
15. Redare din nou sistem A
16. Redare din nou sistem B
17. Oprere volum
18. Scanare auto pentru canale sistem A
19. Scanare auto pentru canale sistem B
20. Selectare melodie card SD/USB sistem A
21. Selectare melodie card SD/USB sistem B
22. Melodia anterioara sistem A
23. Melodia urmatoare sistem A
24. Melodia anterioara sistem B
25. Melodia urmatoare sistem B
26. Redare sistem A
27. Pauza sistem A
28. Redare sistem B
29. Pauza sistem B

Boxa duala Bluetooth

 
 


SISTEM A

A

SISTEM B

B

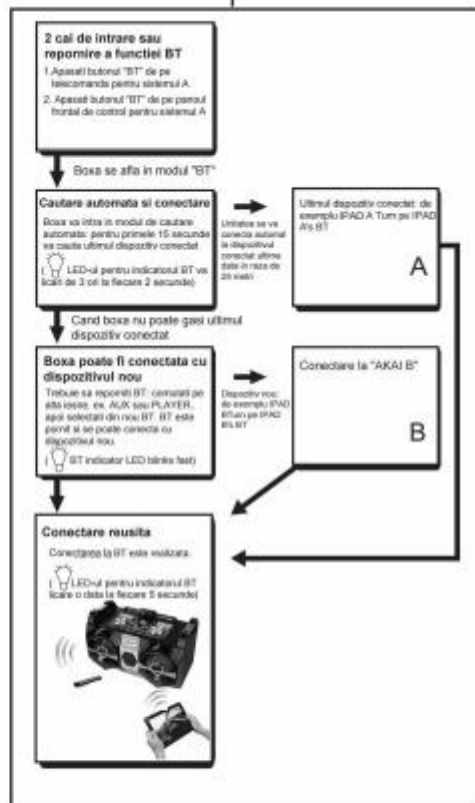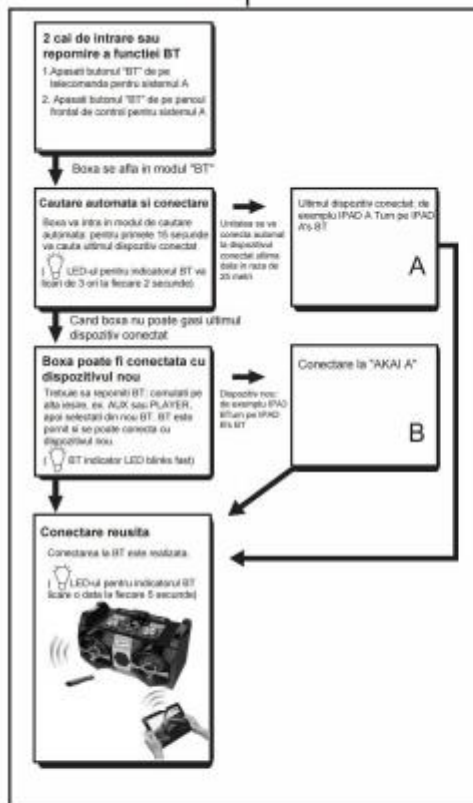

DEZAFECTAREA ECHIPAMENTELOR ELECTRICE ȘI ELECTRONICE UZATE



Acest simbol prezent pe produs sau pe ambalaj semnifică faptul că produsul respectiv nu trebuie tratat ca un deșeu menajer obișnuit. Nu aruncați aparatul la gunoierul menajer la sfârșitul duratei de funcționare, ci duceți-l la un centru de colectare autorizat pentru reciclare. În acest fel veți ajuta la protejarea mediului înconjurător și veți putea împiedica eventualele consecințe negative pe care le-ar avea asupra mediului și sănătății umane.

Pentru a afla adresa celui mai apropiat centru de colectare:

- Contactați autoritățile locale;

- Accesați pagina de internet: www.mmediu.ro;

Solicitați informații suplimentare de la magazinul de unde ați achiziționat produsul.



AKAI